

# Stourton Memorial Hall Kitchen Appliances

## Sinks

There are 3 sink areas in the kitchen, please use each for its intended purpose.

- **Hand washing** must only be done in the small china sink. Paper towels and soap are provided.
- **Food preparation** in the double sinks
- **Crockery wash off & washing up** to the left of the dishwasher

## Crockery & Cutlery

- Take all you need from the cupboards near the kitchen in the Hall.
- At the end of your hire, please ensure everything is completely **CLEANED and DRIED**
- Please return all crockery & cutlery to cupboards
- Crockery will be inspected, and deduction made from security deposit if extra cleaning or drying required.

## Oven

- Turn power switch on wall to right of appliance
- At the end of your hire please turn off all plates, oven and main power switch

## Microwave

- Switch on at 13A socket
- Place food in oven
- Set POWER control – defrost is lowest setting – Max power is 1100watts, this is slightly more than most domestic microwave ovens
- Turn TIMER knob to select appropriate time, this will start the heating cycle

## Fridge/Fridge Freezer and Chiller

These are clearly marked, and you will need to turn them on as required and at the beginning of your hire. PLEASE TURN OFF AT THE END OF THE HIRE.

## Induction Hob

- Connect to 13A outlet
- Place suitable cookware on the appliance. NEVER place empty cookware on the appliance
- Press On/Off button to turn appliance on – The Function button will now flash
- Select mode of operation by pressing the Function button. Functions are Power, Temperature or Time. i.e. Level of Power, desired Temperature or length of Time. When running at a temperature setting the power will reduce as the pan heats up.
- Press Increase or Decrease to change the level of the selected Function
- The appliance has an overheat protection function. If the pan becomes too hot the heat will be turned off, a buzzer will sound and the display will show “E0”, Should this happen wait for 10 minutes to allow appliance to cool before restarting as above.
- When cleaning, the appliance must **not** be immersed in water
- Please return to storage location where you found it at the end of your hire (shelf under serving hatch)

## Soup/Curry/Chile Kettle

- The appliance is not designed to heat food from cold
- This appliance is designed to work with a water bath.
- Remove the inner tank and pour in approximately 600ml of water into the outer tank



n.b. it is not necessary to remove the grey sleeve when filling the outer tank

- Replace inner tank
- Connect appliance to 13A outlet and turn power on and select desired temperature
- Please disconnect and replace on the shelf where you found it (under the serving hatch) at the end of your hire.
- When cleaning, the appliance must **not** be immersed in water

## Washing Up & Dishwasher



- Use the sink to the left of the dishwasher.
- Please ensure all residual food is scraped into the waste bin and plates are rinsed, using the hose provided, before placing in the dishwasher.
- There is a macerator fitted to this sink which can be switched on using the power switch, on the wall to the left of the sink
- Please do not allow any solid objects to go into the drain
- The work flow for washing up is as follows:-

***1. Dirty crockery comes in through the hatch to the left of this sink.***

***2. Residual food is scraped and rinsed off and dishes stacked on dishwasher trays placed on the right of the sink.***


***3. These trays are then slid into the dishwasher and the washing cycle initiated.***

***4. The cleaned dishes are then slid to the right to drain***

- Please turn off macerator power at the end of your hire

## Dish Washer

**Please Turn it on 45 minutes before you intend to use it.** It needs sufficient time to warm up before use.

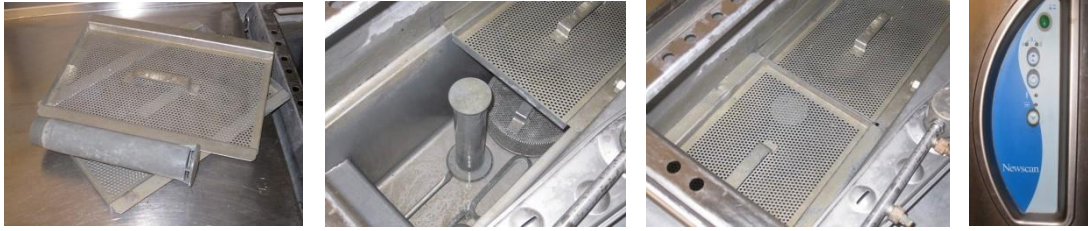

- Ensure plug and filter plates in position
- Pull down hood
- Turn on wall mounted power switch to right of washer
- If no lights showing on control panel press green button.
- Water should now flow into appliance and will begin to warm up. **THIS MAY TAKE 45 MINUTES**
- When ready to use, raise hood and pass in loaded trays. The work flow for trays is from left to right.
- The appliance works better if the trays are not stacked too tightly
- When dirty dishes are in position the hood is lowered to initiate the cleaning cycle
- After washing most of the residual water will evaporate, **however surplus water must be dried with your own tea towels at the end of your hire.**
- If dishwasher is not cleaning crockery adequately, then remedial action must be taken through washing by hand.
- Remove filter plates and wash off any food particles in ‘Wash Off Sink’
- Ensure any food particles are removed from machine

## Emptying Dish Washer

**Not complying with this instruction will result in loss of your security deposit.**

- Open the hood on the dishwasher
- Pull Plug
- Dishwasher will empty
- Remove the perforated filter plates and cylindrical pump cover. Clean these in the washing up sink. This may be done whilst emptying the dishwasher.
- Put lid down – it will do a 10 minute cycle to clean inside.
- Both lights will flash when cycle finished
- Hold bottom button in for 5 secs – cycle light will flash for 5 mins
- Turn off at the wall
- REPLACE PLUG AND CLEANED FILTERS - Leave lid UP

## Lincat Water Boiler

- Ensure water tap is turned on, doesn't need to be open more than 1 turn.
- Ensure Appliance connect to 13A socket and turned on
- Turn appliance on through Power Switch at front.
- The display will indicate when water has reached set temperature.
- At end of your hire please close the water tap and turn off 13A power socket
- There is no needs to empty water from appliance, this will be done by Hall staff
- Wash & Dry drip dray.

## Chiller Cabinet



**IMPORTANT** – During use, water is condensed from the air inside the cabinet and drains through a pipe under the unit. It is essential that a bowl is kept under this discharge point and the bowl emptied as necessary.

*Please note in use it is intended the door side faces the customer and the screen is kept down. This will reduce the formation of condensate water.*

- If required in Hall please ensure you have sufficient help to move it. It needs at least two strong people to move it down and up the slope into the kitchen. There is the danger of hands getting pinched between appliance and the door frame
- When in position place the bowl under the centre of the appliance to catch any water drips.
- Ensure front blind is pulled down
- Connect to 13A outlet and turn power on.
- Please site the appliance so the power cable doesn't become a trip hazard.
- At the end of you hire please return appliance to the storage location in kitchen
- **with bowl in place underneath.**